


Střed nárazníku

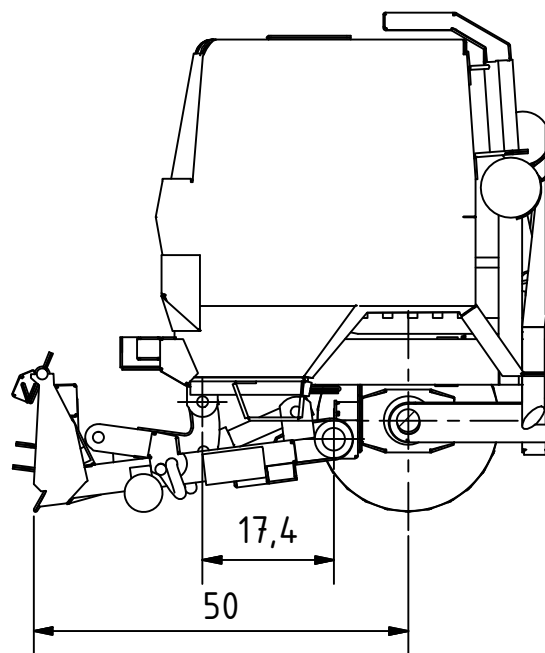


BZ47

5

BZ45

50

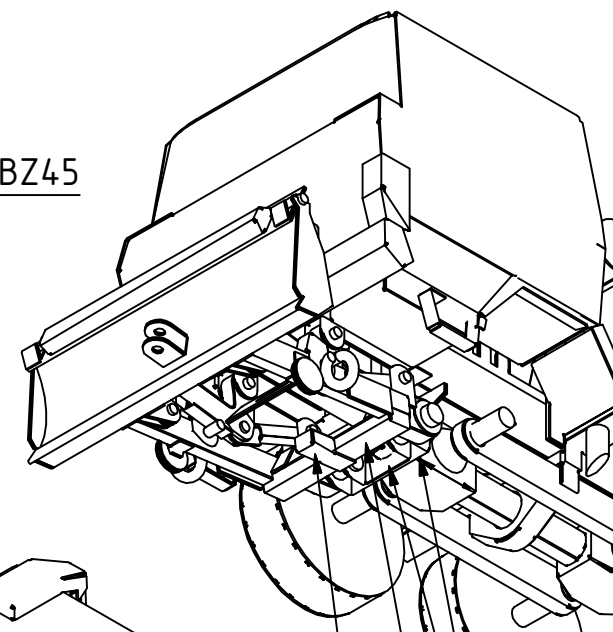


BZ33

BZ34

BZ17

BZ25

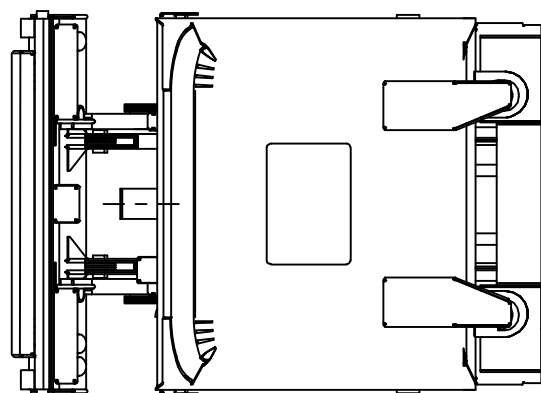

BZ46

BZ47

BZ10

BZ4a/b P

BZ9

BZ5

BZ11

BZ1

BZ45

BZ8

BZ10

BZ4a/b L